REVISION No. 2

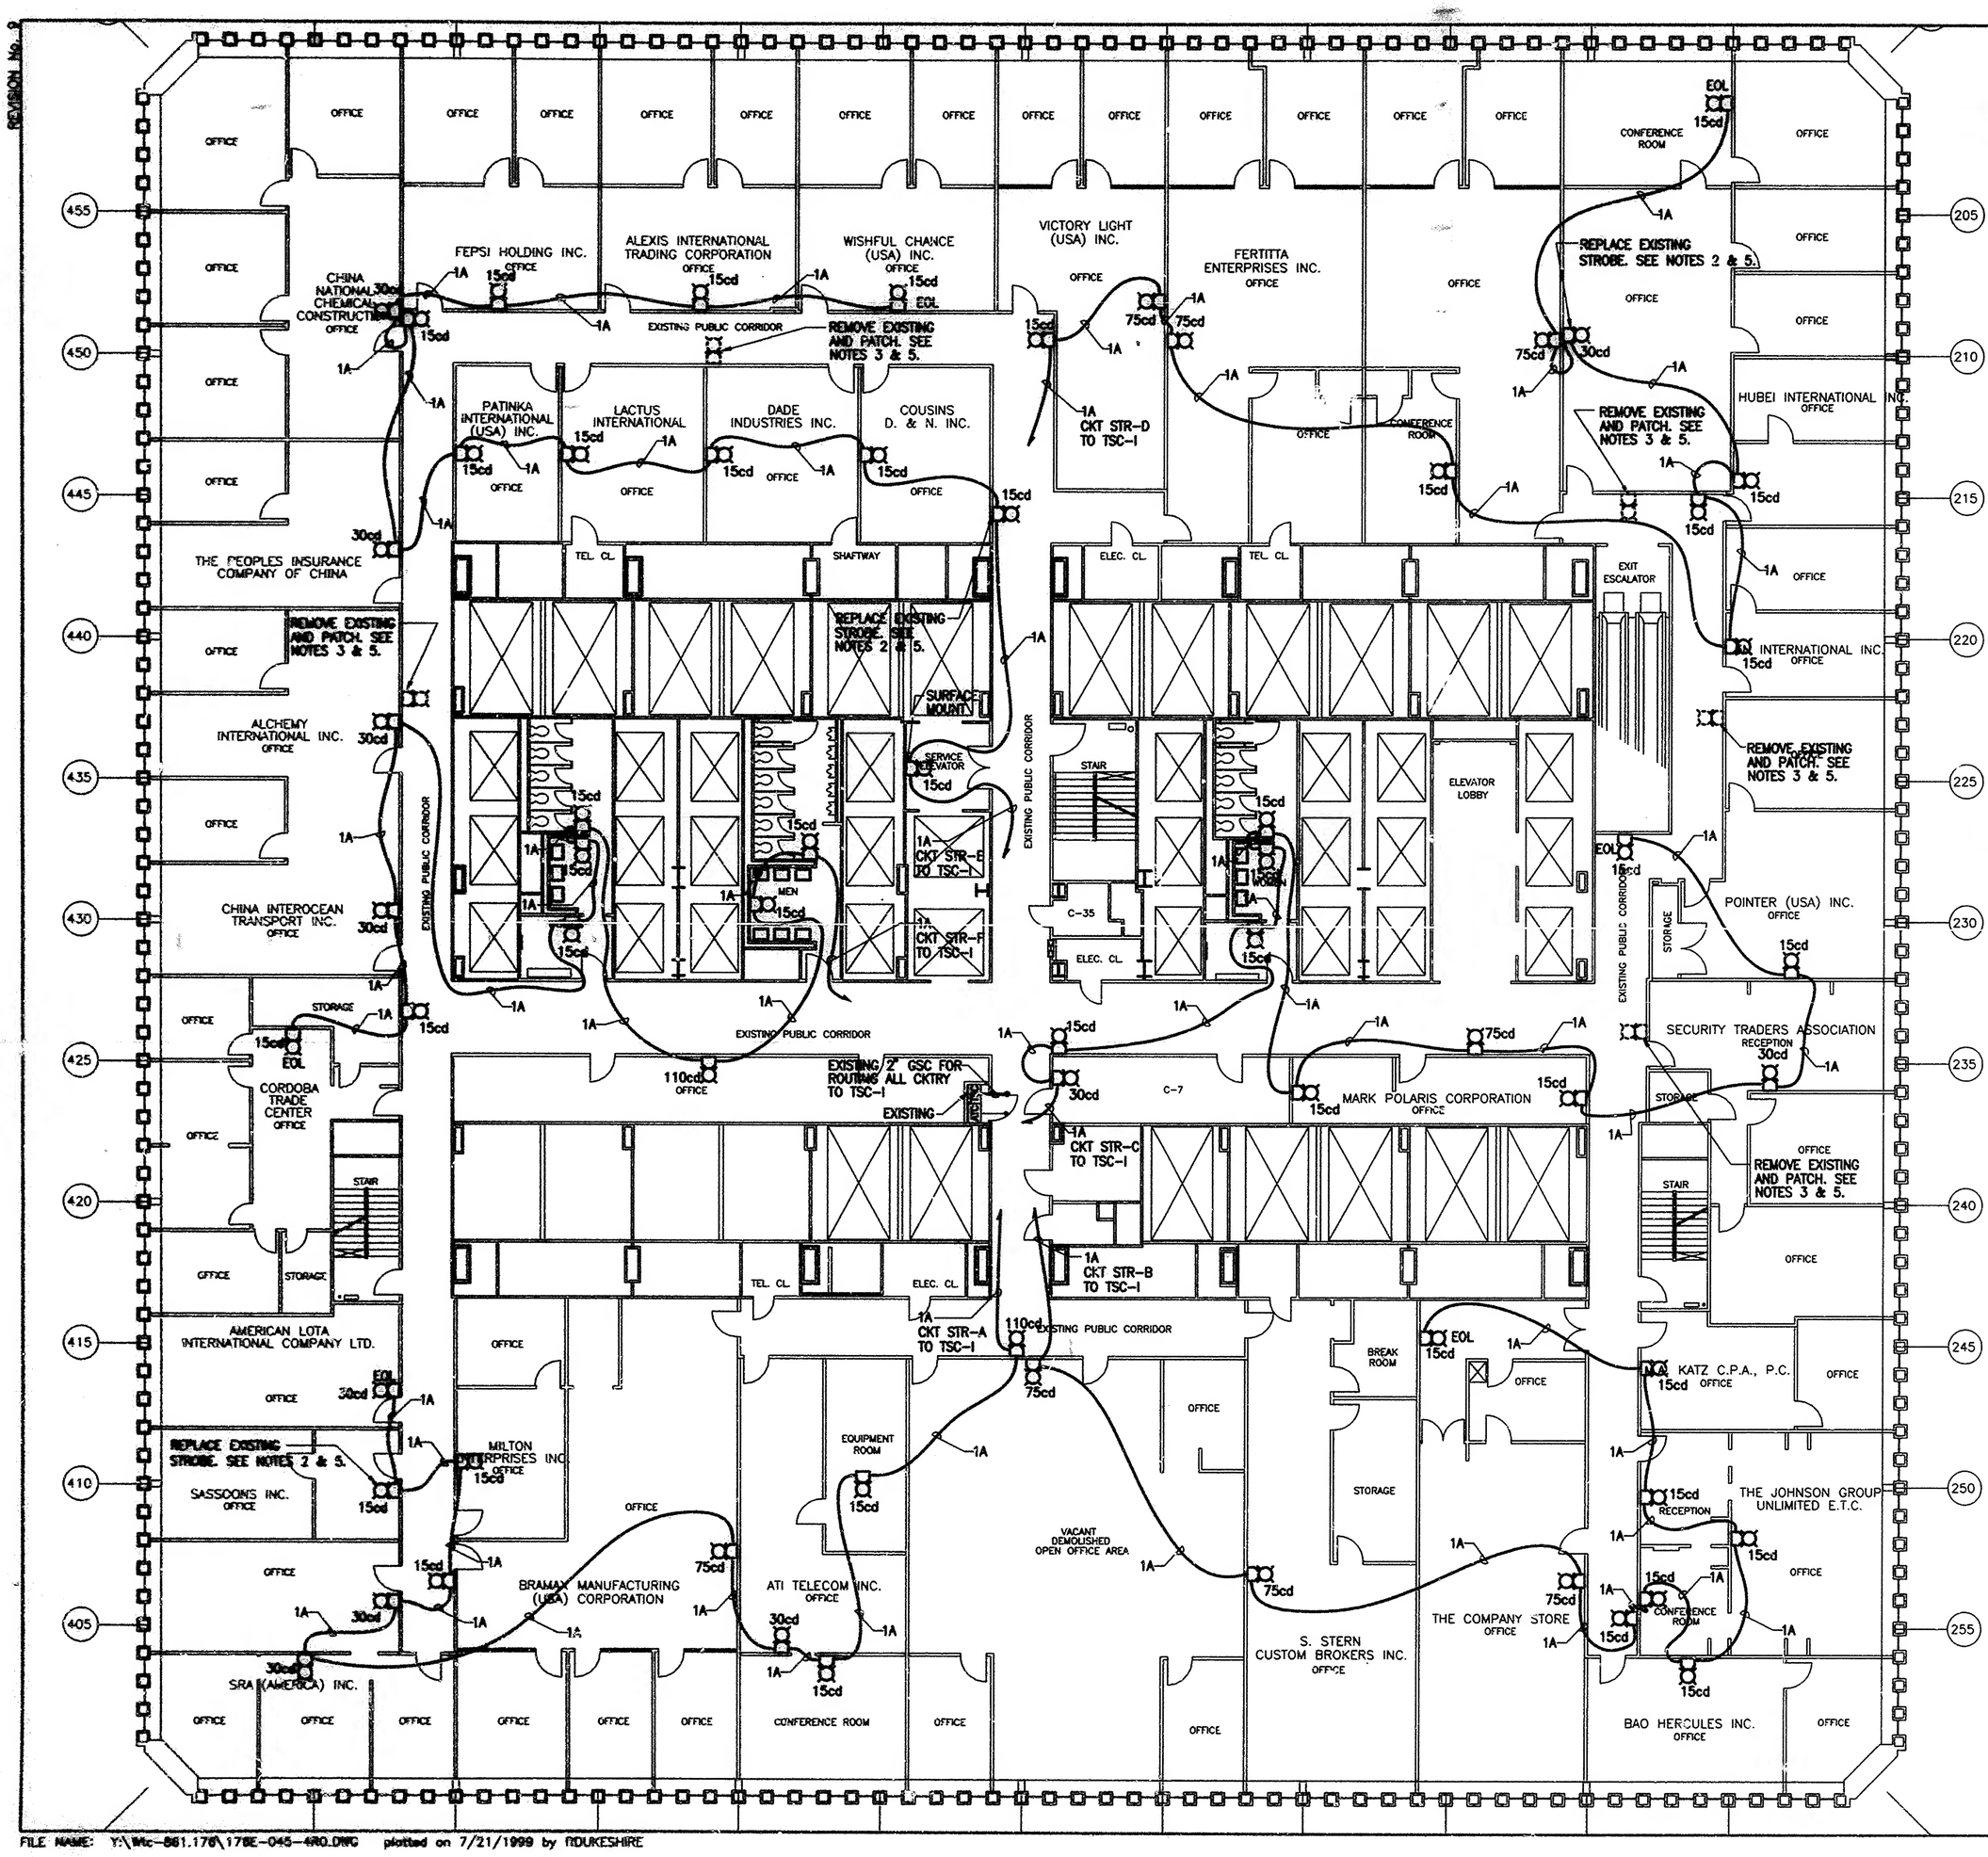

NOTES:

1. FOR LEGEND, ABBREVIATI
   FOR INSTALLATION DETAIL
   SEE DWG. E-3.
2. REPLACE EXISTING STROB
   AND REWIRE AS SHOWN.
   BE UTILIZED IF IT IS SIM
   BOX. SEE INSTALLATION
3. ONLY AFTER INSTALLED S
   SHALL CONTRACTOR REM
   OF THE ENGINEER. PATCH
4. SINCE FIRE ALARM CIRCU
   INSTALLATION OF ALL FIR
   ON DRAWING.
5. DISCONNECT AND ABANDO
   TAPE ENDS OF ABANDON
   THIS WORK SHALL BE DO

STROBE CIRCUIT/

STROBE TYPE AND RATING	TYPE	15
	CURRENT IN AMPS (A)	0.0
QUANTITY OF STROBES PER CIRCUIT	STR-A	5
	STR-B	7
	STR-C	8
	STR-D	6
	STR-E	1
	STR-F	7

CONSTRUCTION SITE

FILE NAME: Y:\Mic-861.176\176E-045-4R0.DWG plotted on 7/21/1999 by MDUKESHIRE